

WH SEAT BRACKETS

#3661 / #3663

Date 11/19/21 rev. 1

Parts

- 4 floor brackets
- 1 Optional pass side spacer bracket

Hardware

- 6 ea. 5/16"x 1" NC bolts
- 2 ea. 5/16"x 1/2" NC bolts
- 10 ea. 5/16" flat washers
- 8 bracket to slider spacers
- 1 ea. 5/16"x 3/4" NC taper head
- 3 ea. 5/16"x 1" NC button head
- 7 ea. 5/16"x 3/4" NC button head
- 2 ea. 5/16" large flat washers (not pictured)
- 2 ea. 5/16" nylock nuts (not pictured)



Passenger seat spacer bracket to floor bracket. (not used with under seat storage)



Driver seat floor bracket to floor



Driver seat to floor bracket



Passenger seat floor bracket to floor



Passenger seat to floor bracket

1. Bolt driver seat brackets into floor with hardware as shown in pic below. Double check position of brackets with seat. Brackets are slotted for slight adjustment from one Bronco to another.
 2. Bolt passenger seat brackets into floor as shown. If you are not using the under passenger storage compartment bolt passenger side spacer bracket to the left passenger floor bracket using 2 5/16" x 1/2" bolts. Bolt the spacer bracket into the bottom side of the floor bracket.
- You will need to drill the 2 rear holes on the passenger side. Double check position of brackets with seat before drilling holes in the floor. Use large washers and 5/16" nylock nuts under the body.
4. Bolt the seats to floor brackets. Use spacers between floor brackets and sliders to clear bolts on the floor brackets. Refer to seat slider to seat instructions for slider position on bottom of seats.

NOTE: 7 ea. 5/16"x 3/4" NC button head through slider and spacer into floor bracket threaded holes. 4 on driver side and 3 on passenger side. See "A" on pic


1 ea. 5/16"x 1" NC button head with washer

1 ea. 5/16"x 1" NC button head this one goes through slider, floor bracket and floor

2 ea. 5/16"x 1/2" NC bolt with washer from underneath


1 ea. 5/16"x 3/4" NC taper head

1 ea. 5/16"x 1" NC bolts with washer

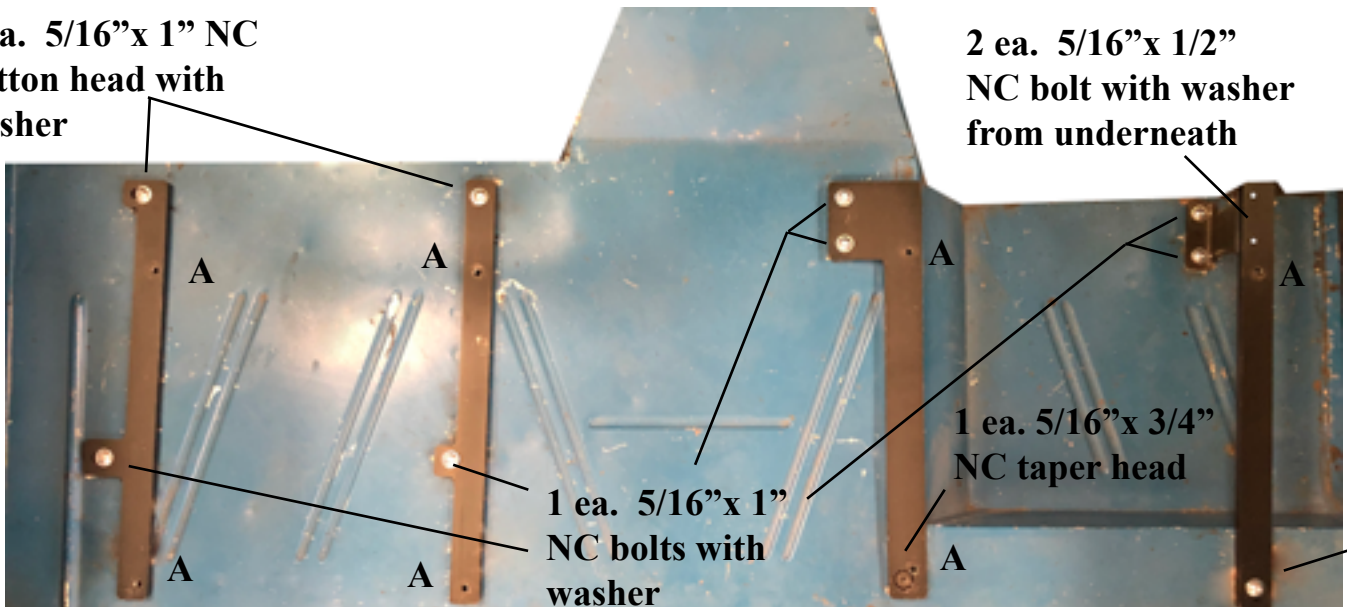

WH SEAT Sliders to Seat Date 11/19/21 rev. 1

Front of seat

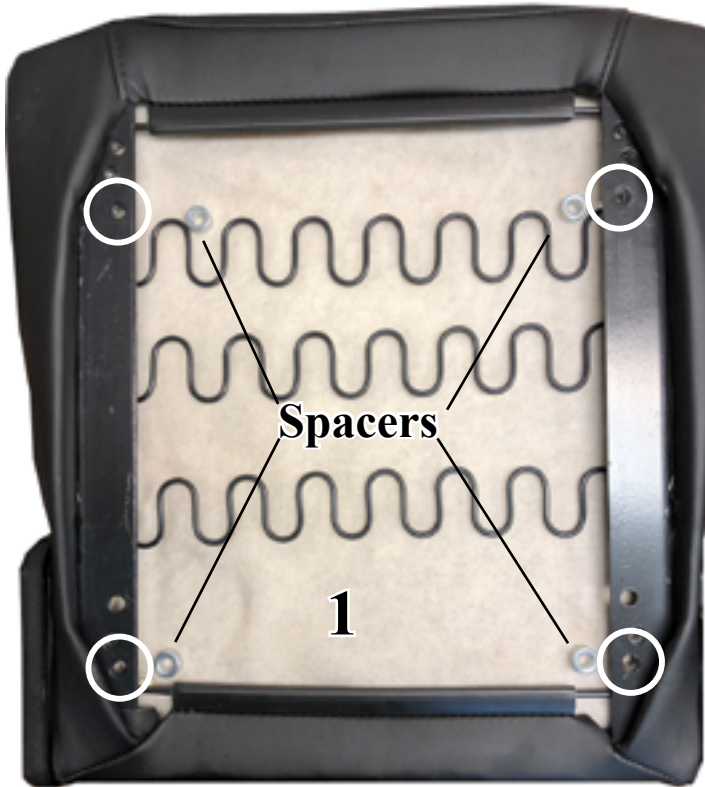

1. Pic #1 shows bottom of the seat. The material has been taken off of the steel seat frame to show mounting holes. The circles show the holes to use. Both front and rear use the farthest holes toward the rear of the seat.
2. You don't have to remove the material from the seat frame. We prefer to fold it under to expose the holes.
3. Add spacers between the seat frame and sliders. Bolt sliders to seat frame. Pic #2 Push down on forward portion of slider to move the slider and expose the bolts holes. Tighten sliders to seat frame.
4. Pic #3 Carefully slide towel bar onto sliders. Bend at the front of towel bar goes toward the seat not the floor. This makes it easy to grad and adjust. Now you are ready to mount the seats.

Front of seat



Towel bar

