

WILD HORSES


FOUR WHEEL DRIVE

Phone (209) 400-7200 Fax (209) 943-7923 www.wildhorses4x4.com

U-Bolt Torque

#1195, 791195, 1220 Date 3/1/13


Position U-bolts and plate as shown. Make sure tapered side of Extreme duty plate is towards the leaf spring. Any excessive amount of threads sticking up above u-bolt nuts may be cut off if desired.

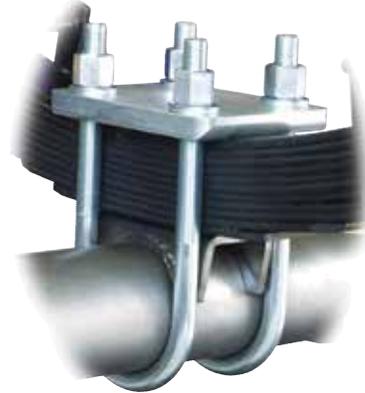

Tighten U-Bolts in the order shown. Torque to spec completely in the order shown. Check U-Bolts for tightness after 100 miles

Torque Specs

1/2" U-bolts (1220)	70lbs
9/16" U-bolts	95lbs
5/8" U-bolts (1195, 791195)	125lbs

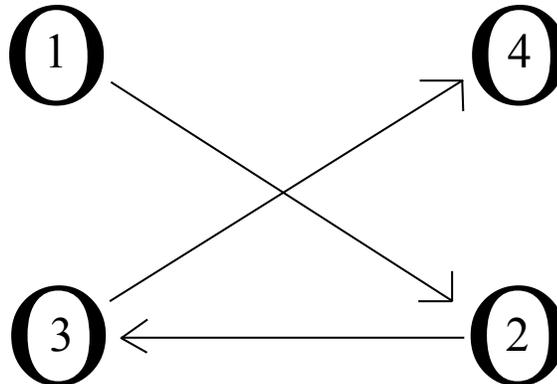

U-Bolt and spring instructions

Wild Horses rear leaf springs should be mounted with the double wrap end facing the front of the vehicle. Torque the U-bolts down evenly until correct torque is achieved. Re-torque after 100, 500 miles and again after another 500 miles. We highly recommend checking u-bolts after each off-road use because of the high amount of stress placed on the u-bolts during off-roading.