

VFD3-66F-BRONCO

Dakota Digital Mounting Detail
For 1961-'66 Ford Pickup
1966-'77 Ford Bronco


1. Disconnect and remove the stock gauge panel from the dash.



2. Remove the cluster from the bezel so you are left with a bare bezel.




3. Mount the VFD3 system to the stock bezel using the provided hardware.

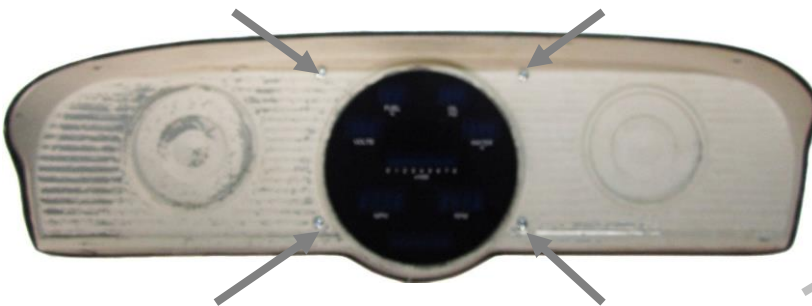

- Pickup applications must have the dash cut for the VFD3 system to fit. Bronco applications can skip to the step 5.

- With the VFD3 system mounted to the bezel; lay the bezel into the dash while lining up the mounting holes to accurately trace where clearance is needed.

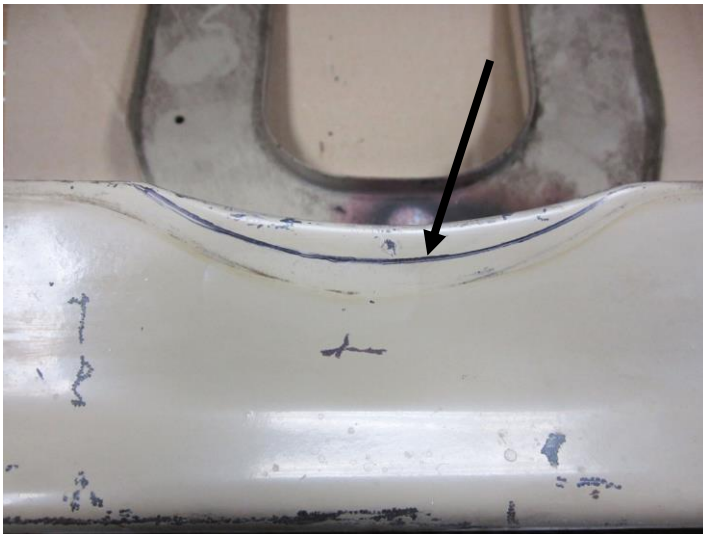

- Carefully remove the area of the dash that interferes with the VFD3 system fitment. Test fit and make additional cuts as needed until there is no contact between the VFD3 system and the dash.

- Reassemble the stock bezel to the dash using the stock hardware from disassembly and refer to the main manual to complete the VFD3 gauge system installation.

⚠WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com

dakotasupport@dakotadigital.com Copyright 2011 - Dakota Digital, Inc.

Phone (605) 332-6513
Fax (605) 339-4106