


DRIVER SIDE MOUNTING BRACKET
USE EXISTING HOLES




CENTER MOUNTING BRACKET
USE EXISTING HOLES


PASSENGER SIDE MOUNTING BRACKET
DRILL TWO 1/8" DIA. HOLES



BRACKETS ARE MOUNTED USING PLATED #8 SCREWS
USE #10 SCREWS IF THE #8 DO NOT FASTEN
WIPER COVER IS MOUNTED USING #8 BLACK OVAL PHILLIPS TRIM SCREWS
WIPER COVER SHOULD MOUNT WITHIN 1/16" FLUSH TO BOTTOM OF FRAME

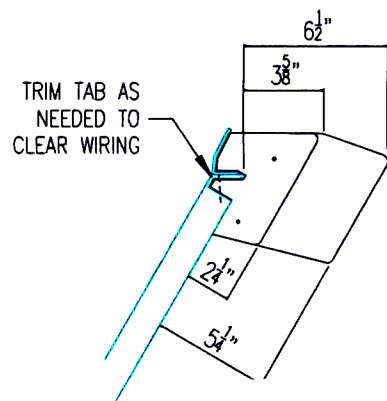

K-LINE/RAMPAGE/SPECIALTY

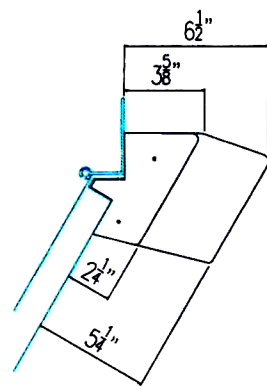

BESTOP STYLE

